



### Installation

#### Mechanical Structure & Dimensions

1

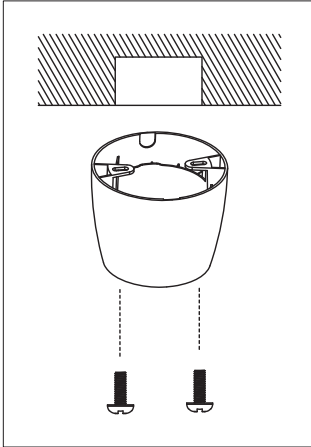


1. Fix the spring-mount box (with junction box)

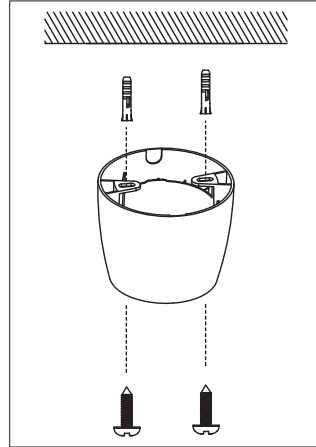

1. Fix the spring-mount box (without junction box)

2

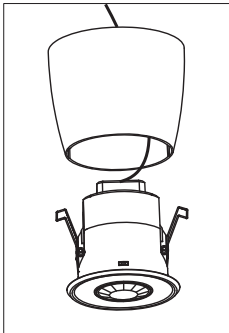

2. Fix cables


3

3. Install the sensor into the spring-mount box




4

Follow the track

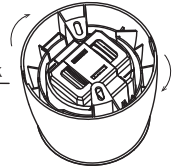


4. Rotate sensor counter-clockwise till the end to tighten up

5

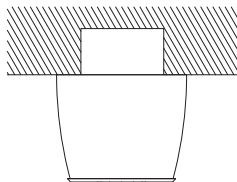

5. Finished (with junction box)

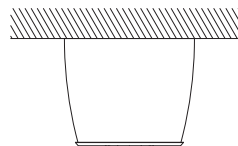

5. Finished (without junction box)